
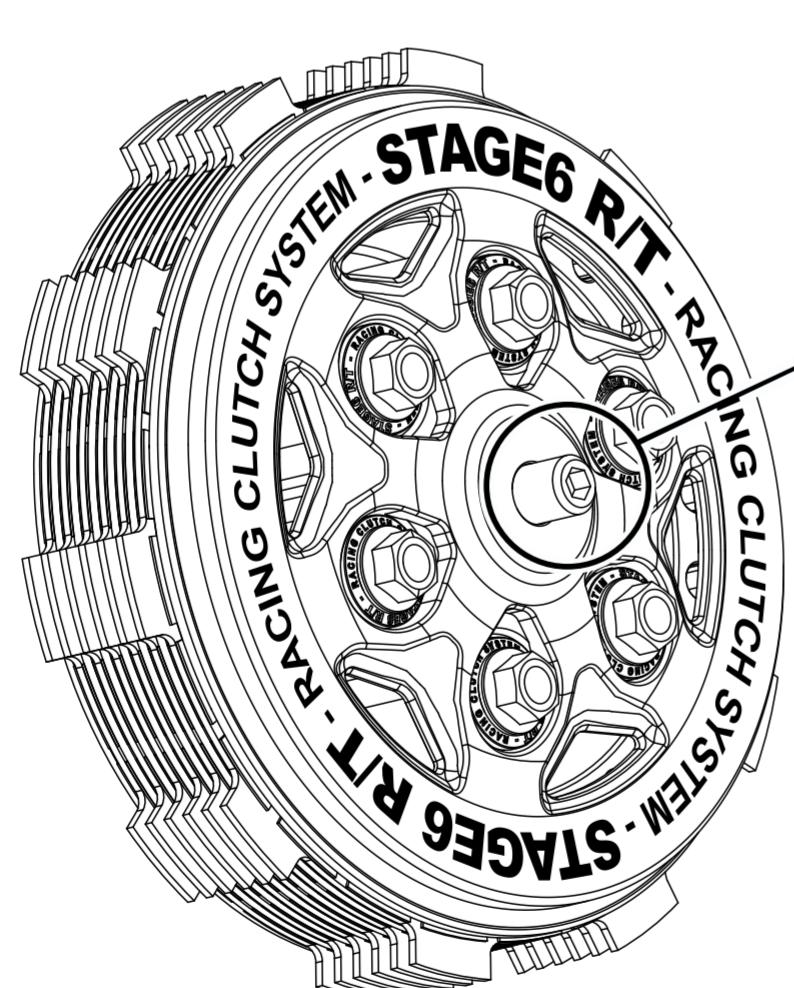


S6R/T®

BREED OF SPEED

★★

SOAK FRICTION DISCS IN FRESH GEAR OIL FOR A
MINIMUM OF 2 HOURS PRIOR TO ASSEMBLY.

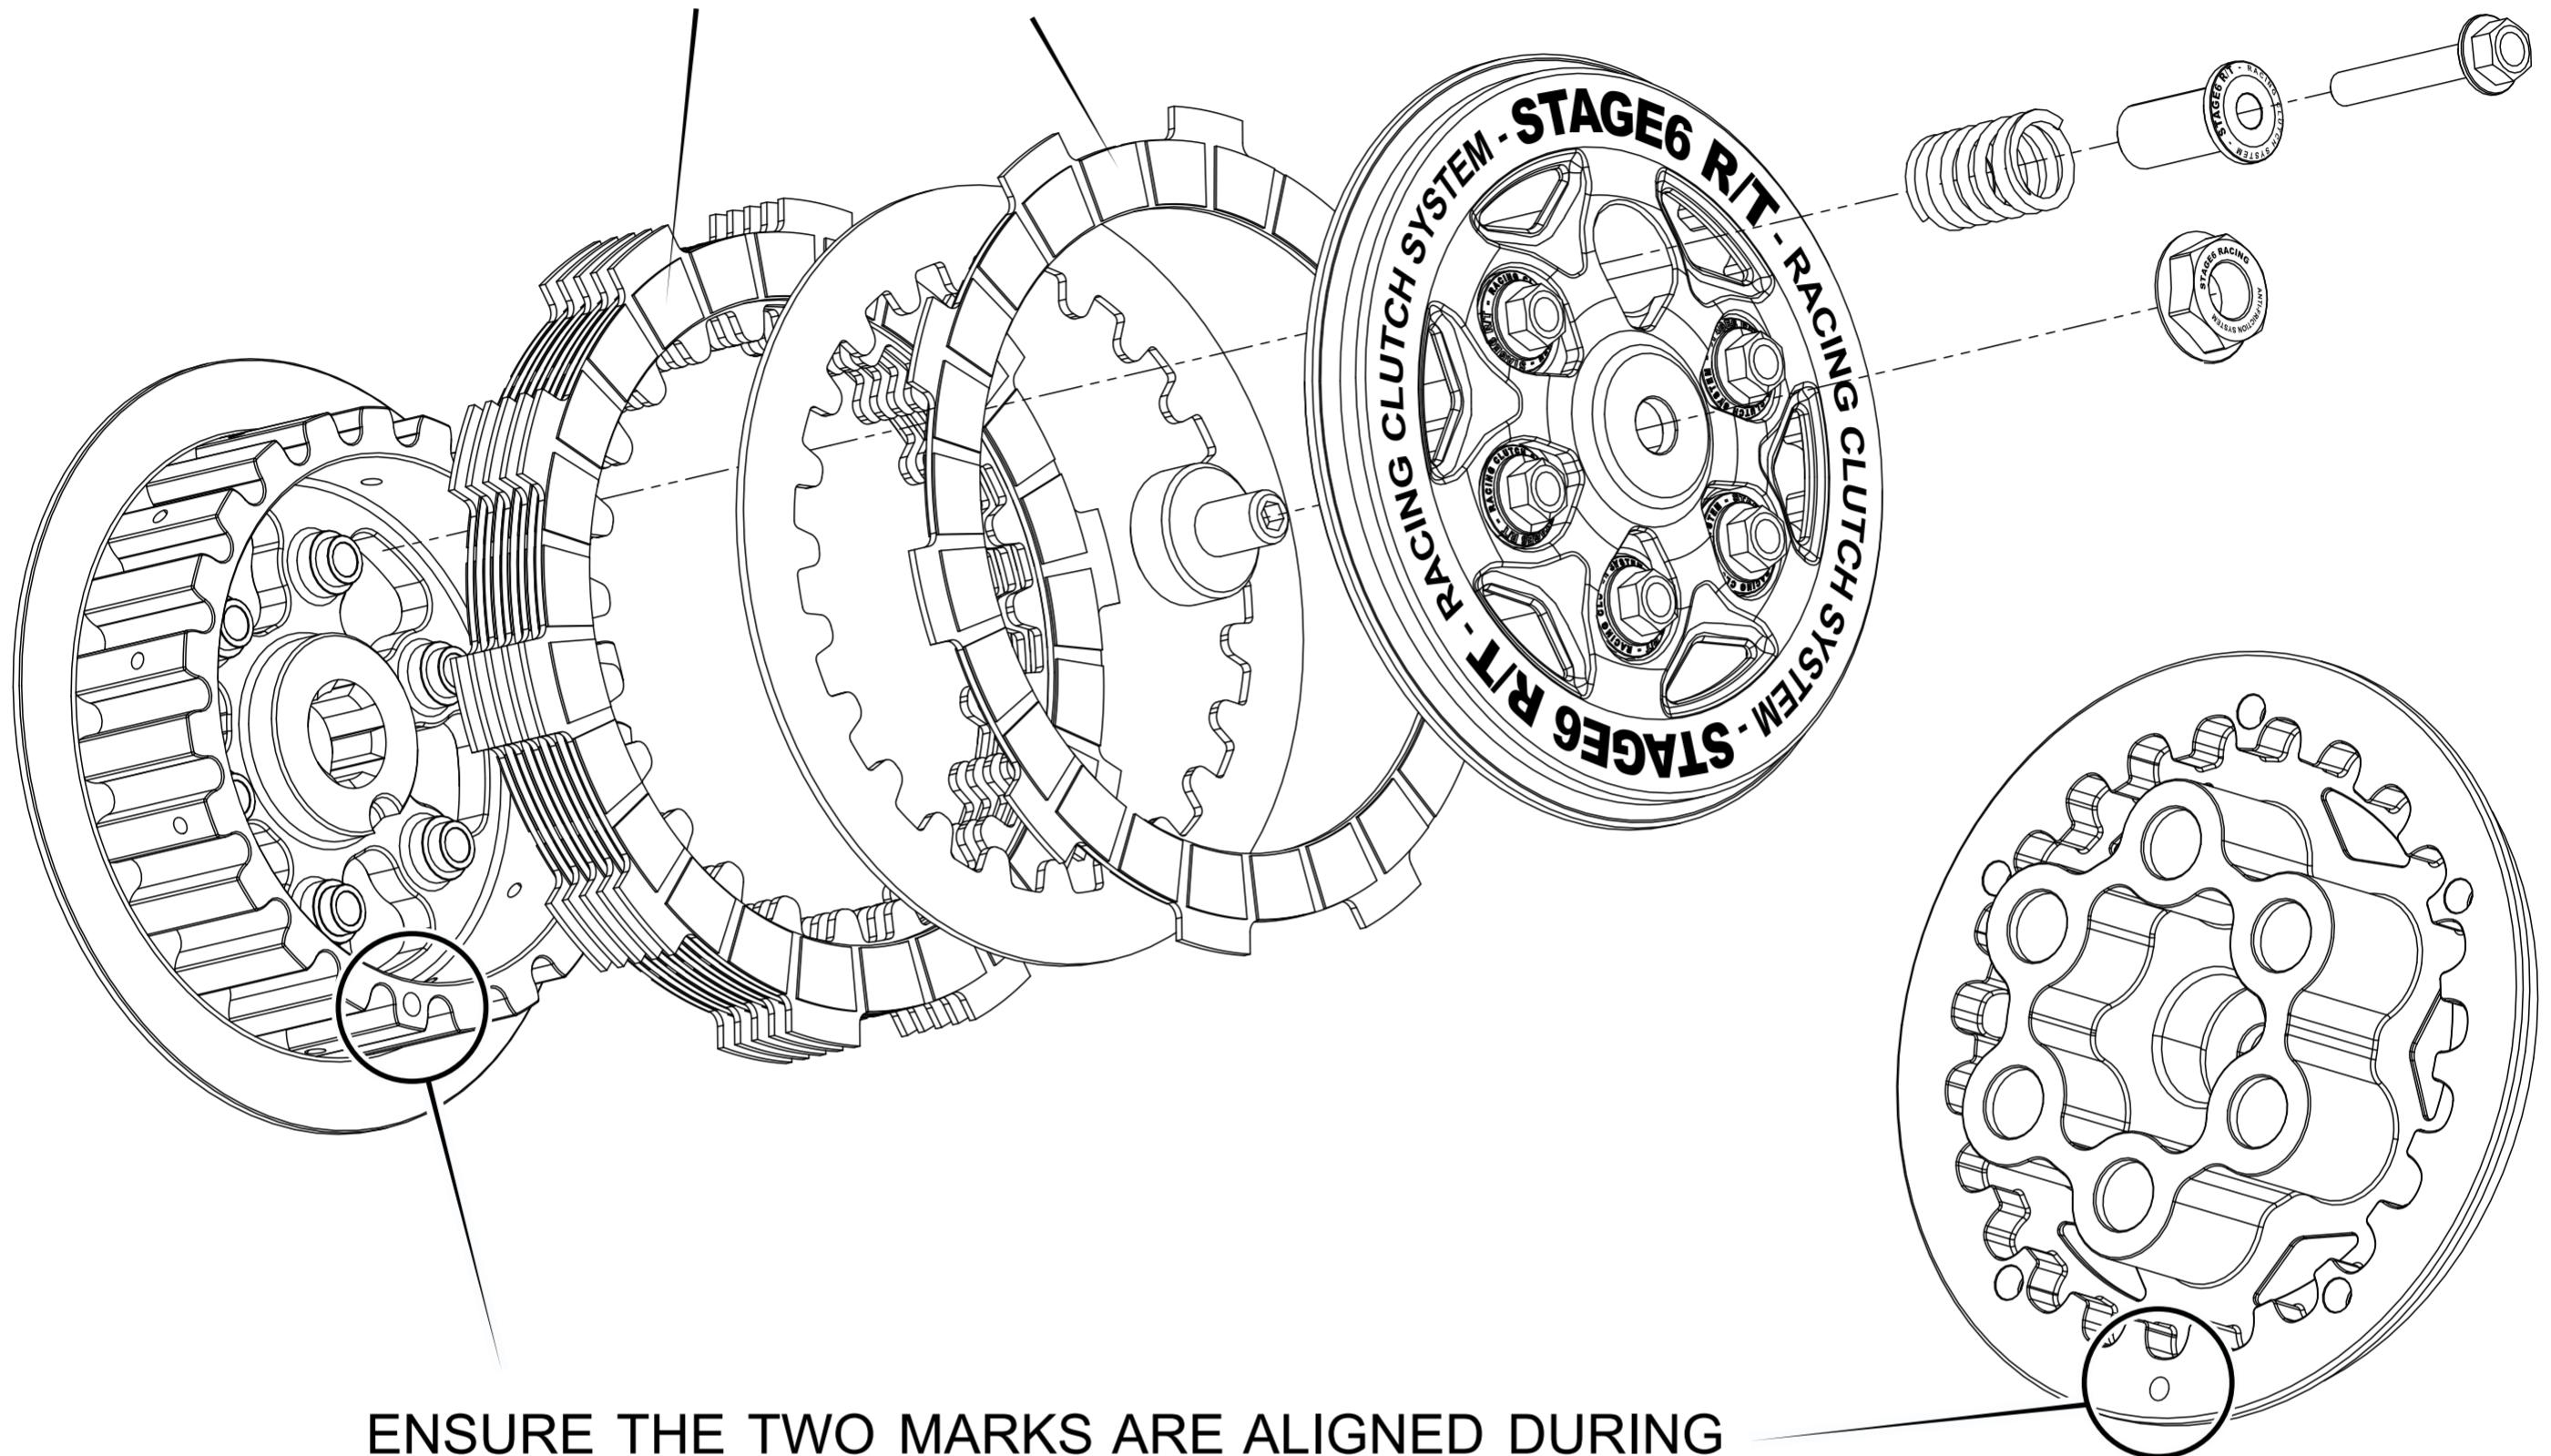

SCREW THE CLUTCH PUSH ROD
UNTIL IT MAKES CONTACT WITH THE
SHAFT, THEN LOOSEN IT BY HALF A
TURN.

LOCK THE POSITION WITH THE LOCK
NUT, HOLDING THE PUSH ROD IN
PLACE WITH A HEX KEY.

STAGE6 R/T CNC CLUTCH AM6 | **INSTALLATION
GUIDE**
S6-5058810