




EN

KICK STARTER  
**CNC EVO MKII**  
MINARELLI

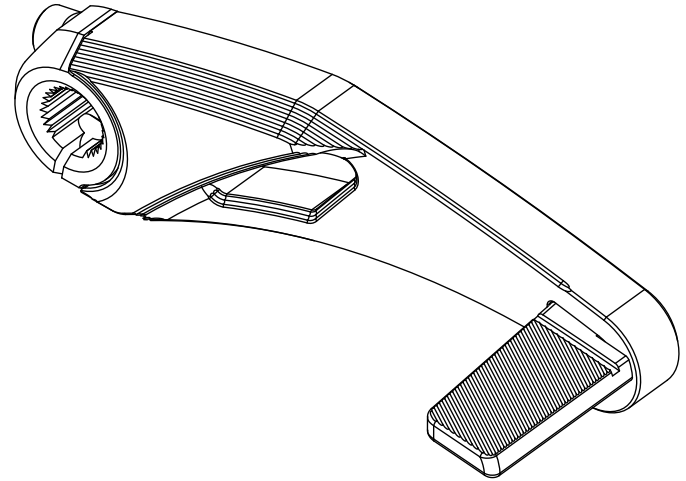

1. Remove the standard kick starter.
2. Take out the screw at the bottom side from STAGE6 kick starter.
3. Install the kick starter on the kick starter shaft.
4. Put the screw back in the kick starter, tie it on to finish the installation.